

Assembly instructions

ELWA® Modbus Interface



Delivery

- ELWA Modbus Interface
- 5V power-supply unit
- Assembly instructions
- Temperature sensor with 2 m connecting cable

Intended use

For operation with ELWA.




Safety instructions

When installing and connecting the relevant standards must be observed. In case of damage caused by inobservance these operating instructions, the warranty expires.

For details see online operation manual and instruction manual ELWA.

Assembly

ELWA has an IR-interface behind the window of the LEDs Display:

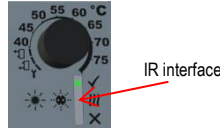

Proper communication between ELWA und ELWA Modbus Interface is only possible with exact positioning.



Functionality

The ELWA Modbus Interface as a link between the ELWA and a Modbus based bus system. It also provides functions for an additional temperature sensor.

The two „Temp“ clamping units can be used to pin the provided temperature sensor.

For details see online operation manual.

Liability and warranty exclusion

A liability and warranty exclusion applies to:

- Property damage or personal injury caused by improper handling or inobservance of the safety and operating instructions
- Secondary damage
- Unauthorized modifications, disassembling or other interventions on the device, conversion of the device

Placing into operation / Start-up

For details see online operation manual and instruction manual ELWA.

Troubleshooting

The device contains no parts that can be fixed by the user. In case of malfunction, please contact your specialized dealer.

Disposal



Keep the packaging material or dispose it properly.
Dispose the product at the end of its service life in accordance with the applicable regulatory requirement.

Subject to change

